




---

## ONE TOUCH RICE COOKER

---

400W-2L / 220V / 50Hz

### INSTRUCTION MANUAL

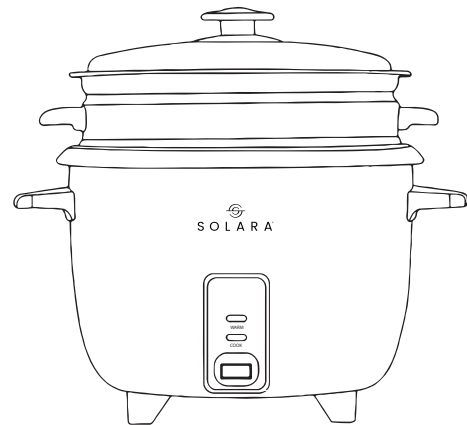

Please read and save all instructions to ensure safe and effective use of this appliance.

## TABLE OF CONTENTS

---

Table of Contents	2
Welcome to the SOLARA Family!	3
Before You Begin	4
General Safety Regulations	4
KNOW YOUR SOLARA ONE TOUCH RICE COOKER	5
USING YOUR SOLARA ONE TOUCH RICE COOKER	6
Care & Maintenance	6
Storage	6

## CARE & MAINTENANCE

**Warning: Always turn off and unplug your appliance before you remove any accessories or commence cleaning the product.**

- Never immerse the outer body in any liquids or pour liquid onto it.
- Avoid using abrasive materials to clean the cooker to preserve the condition of the appliance.
- Before cleaning, unplug the appliance and wait for the appliance to cool down.
- Clean the appliance with a damp cloth.
- Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid.
- The device is not dishwasher proof.

## STORAGE

- Before packing away for storage, ensure the SOLARA One Touch Rice Cooker is clean and dry.
- We recommend storing the SOLARA One Touch Rice Cooker, with all its accessories, in its original carton to protect it from dust.
- Store the SOLARA One Touch Rice Cooker in a clean and dry place, out of children's reach.
- Do not place heavy objects on top of the SOLARA One Touch Rice Cooker during storage.

## USING YOUR SOLARA ONE TOUCH RICE COOKER

### Cleaning and putting the rice into the pot:

After cleaning the rice in another container, put it into the Pot according to the rice soft/hard degree, add water.

### Placing the Pot :

Place the Pot inside the cooker and move it around so as to make it touch closely with heating plate. Put the Lid on the top.

### Cooking Rice :

Connect the wire plug first into the input socket of the cooker, then put another plug in the power socket and switch on. At this time, the pilot red lamp and pilot yellow lamp will light up showing that the cooker is working. When the rice is well boiled, the switch button will be automatically realized and the pilot lamp will go out. Keep the Lid on for 10 Minutes and the rice will get thoroughly cooked.

### Function of the Heat Preservation Unit:

The temperature of the rice in the cooker will automatically be kept within range of 60C - 70C. Below this point the pilot yellow lamp will begin to filcher, indicating that the Automatic Heat Preservation Unit has been set to work.

## WELCOME TO THE SOLARA FAMILY!

At SOLARA, we are all about making healthy choices. And eating healthy should always be considered in this journey. Truly we are what we eat. So, here we are with an awesome appliance to aid you in this journey. Also, we are constantly working to create EASY, TASTY & HEALTHY recipes for you!

We can't wait to see how you make the SOLARA One Touch Rice Cooker part of your everyday, please feel free to share it with us on social media: @solaraindia.

## BEFORE YOU BEGIN

- Remove all packaging materials from in and around the cooker and verify that all parts are accounted for.
- Place the cooker on a stable, level surface, away from external heat sources.
- Take the appliance and accessories out the box. Remove the stickers, protective foil, or plastic from the device.
- Read all Important safeguards and cautionary information in this User guide. Failure to do so may result in property damage and/or personal injury.
- Do not remove safety warning stickers or rating label.
- Place the device on a flat stable surface and ensure a minimum of 10cm free space around the device.
- This device is not suitable for installation in a cabinet or for outside use.
- Put the power cable into the socket.
- Always place the inner pot inside the outer pot before switching on the rice cooker.
- Make sure that the inner pot contains liquid, or be ready to immediately add oil, butter, or margarine to the inner pot before switching on the rice cooker.
- Always dry the outer surface of the inner pot before placing it inside the cooker.
- Any moisture remaining on the inner pot surface may cause a cracking noise while the unit is heating up.
- When the device is turned on for the first time, a slight odor may occur.
- This is normal, ensure adequate ventilation. This is only temporary and will disappear soon.

## GENERAL SAFETY REGULATIONS

- By ignoring the safety instructions, the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- This appliance is intended to be used in household and similar applications such as: Staff kitchen areas in shops, offices, and other working environments.
- By clients in hotels, motels, and other residential type environments.
- Bed and breakfast type environments.
- Farmhouses.
- Children shall not play with the appliance.
- This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above if they are continuously supervised. This appliance can be used by people with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children.
- This appliance shall not be used by children.
- Keep the appliance and its cord out of reach of children.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid and the Surface may get hot during use.
- Only use the appliance with the appropriate connector.
- The connector must be removed before the appliance will be cleaned, please make sure the inlet is completely dry before the unit will be used again.

**WARNING:** Position the lid so that steam is directed away from the handle.

- DO NOT touch hot surfaces of rice cooker. Use side handles only.
- Close supervision is necessary when any appliances are used by or near children.
- DO NOT touch hot surfaces of rice cooker. Use side handles only.
- Always keep the appliance and cord away from children.
- Always disconnect the appliance from the power supply if it is not in use and before cleaning.
- Allow the unit to cool before putting on or taking off parts, and before cleaning and storing.
- To disconnect, press Cancel button, then remove plug from the wall outlet.
- DO NOT leave appliance unattended while in use.
- DO NOT use rice cooker for other than intended use.
- For Household Use Only. DO NOT use outdoors.

**Caution:** To protect against electrical shock, DO NOT immerse cord, plugs, or the unit in water or other liquid.

## KNOW YOUR SOLARA ONE TOUCH RICE COOKER

