

 SOLARA®

 SOLARA®

DIGITAL AIR FRYER OVEN

1400-1600W / 220-240V / 50-60Hz

Model: SOL-AF-104

INSTRUCTION MANUAL



Please read and save all instructions to ensure safe and effective use of this appliance.

TABLE OF CONTENTS

Table of Contents	2
Welcome to the SOLARA Family!	3
Before You Begin	4
General Safety Regulations	4
Know Your SOLARA Digital Air Fryer Oven	6
Using Your SOLARA Digital Air Fryer Oven	7
Pre-set Programs	8
Care & Maintenance	9
Trouble Shooting	9

WELCOME TO THE SOLARA FAMILY!

At SOLARA, we are all about making healthy choices. And eating healthy should always be considered in this journey. Truly we are what we eat. So, here we are with an awesome appliance to aid you in this journey. Also, we are constantly working to create EASY, TASTY & HEALTHY recipes for you!

We can't wait to see how you make the SOLARA Digital Air Fryer Oven part of your everyday, please feel free to share it with us on social media: [@solaraindia](https://www.instagram.com/solaraindia).

BEFORE YOU BEGIN

- Remove all packaging materials from in and around the appliance and verify that all parts are accounted for.
- Place the appliance on a stable, level surface, away from external heat sources.
- Read all Important Safeguards and cautionary information in this user guide. Failure to do so may result in property damage and/or personal injury.
- Follow care & maintenance instructions in this user guide to clean the appliance.
- Do not remove any safety warning stickers or rating label.

GENERAL SAFETY REGULATIONS


When using electrical appliances, basic safety precautions should always be followed including the followings.

READ ALL INSTRUCTIONS BEFORE USING & SAVE THESE INSTRUCTIONS.

- To protect against electrical shock, do not immerse cord, plug, or main body (motor) in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet before assembling, before cleaning and when not in use.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of attachments not recommended or sold by manufacturer may cause fire, electric shock, or injury.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always securely clamp in place all parts before the appliance is turned on. Do not unfasten while appliance is in operation.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not walk away from the appliance when it is in operation.
- Do not disassemble the appliance.
- Do not put any foreign materials into the machine.
- Do not let cord hang over edge of table or counter or touch heated surfaces.
- To disconnect, press/switch OFF then remove plug from wall outlet.
- Operator must obey a rated intermittent time; it is forbidden to make it idle run or overload. Changing the power cord shall be operated by the professional maintenance personnel.
- Do not let any water or other liquid enter the appliance to prevent electric shocks.
- Always place the food ingredients inside the basket, away from the heating elements.
- Always make sure food ingredients do not touch the heating elements.
- Do not fill the basket with oil as it may cause a fire hazard.
- Do not touch the inside of the appliance when in operation.
- Do not touch the heating element immediately after removing the basket to avoid burns.
- Always check and ensure that the voltage indicated on the appliance matches to the local voltage values in your country before you connect the appliance to power supply.

- Do not operate the appliance with wet hands.
- Always check and make sure that the appliance is connected to an earthed wall socket.
- Always check and make sure that the appliance plug is properly inserted into the wall socket.
- Never connect the appliance to an external timer switch.
- Do not place the appliance on/near any hot surfaces, combustible materials such as table cloths, curtains etc.
- Do not place the appliance too close to walls or other appliances. Check and make sure that there is at least 10cm of free space on side of the appliance.
- Do not place anything on top of the appliance. If placing the placing the appliance under a shelf, please make sure that there is at least 10 cm of free space above the appliance.
- Do not use the appliance for any other purpose other than as described in this manual.
- Do not leave the appliance unattended while in operation.
- Do not cover the air inlet and/or the air exhaust openings while the appliance is in operation.
- During operation, it is normal for hot steam to release through the air exhaust openings. Make sure that hands, face and other body parts are at a safe distance from the steam and air exhaust openings.
- Please take care when removing the basket from the appliance during/after cooking. Hot steam and/or hot air will escape from the appliance when removing the basket, please take care to avoid personal injury.
- After use, always unplug the appliance and allow the appliance to cool for 30 minutes.
- Before each use, make sure to remove any food remains/residue from the previous use.
- Please note that the surface below the appliance may become hot during use.
- In case of smoke or fire, immediately unplug the appliance. Wait for the smoke emission to stop before removing the basket from the appliance.
- This appliance is intended for household use only. It is not intended for use in environments such as staff kitchens, offices, farms, hotels or similar places.
- If the appliance is used incorrectly, is used without regard to the instruction in this manual, or is tampered by any unauthorized persons, it will void any warranty and SOLARA is not liable for any damage.

KNOW YOUR SOLARA DIGITAL AIR FRYER OVEN

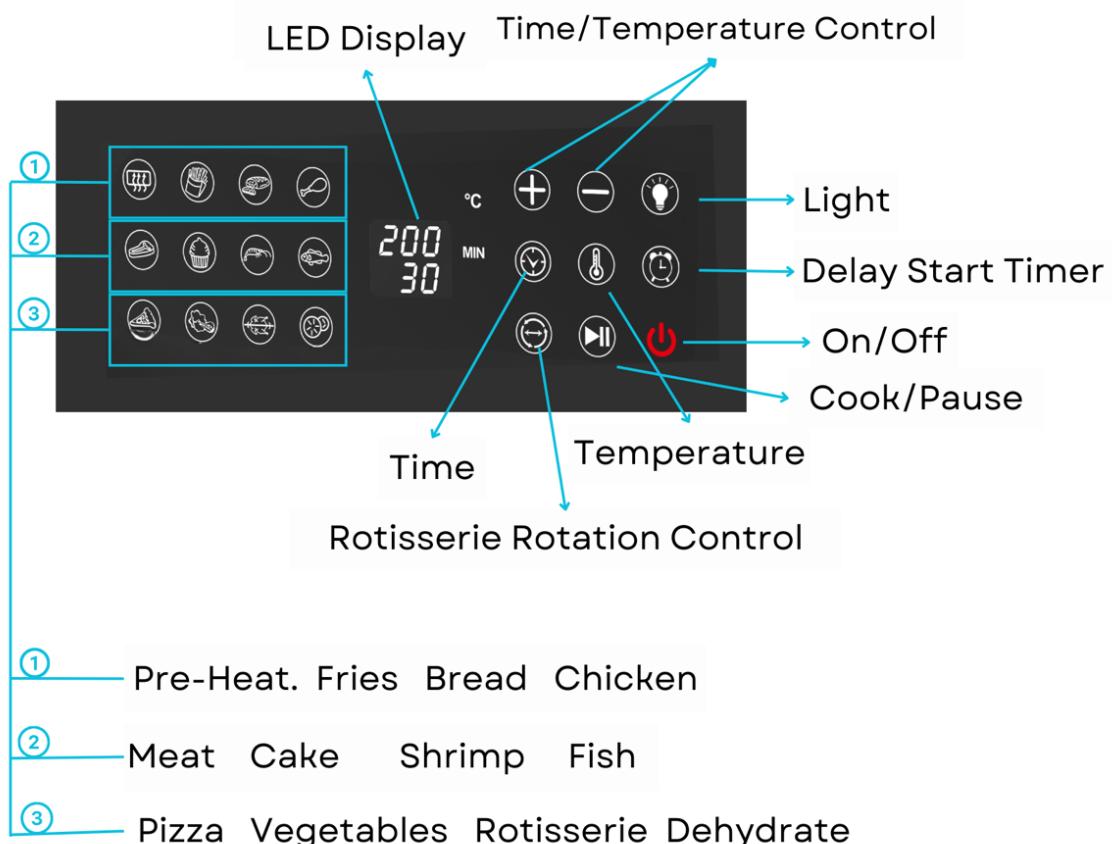

USING YOUR SOLARA DIGITAL AIR FRYER OVEN

Turn On

Place the appliance on a stable flat surface. Plug in to power supply. This will put the appliance in standby mode. In the standby mode, press on the On/Off button.

Time & Temperature Adjustment



By default temperature 180°C is select. You can easily adjust the temperature as needed using the +/- buttons. Minimum temperature that can be selected is 50°C. Maximum temperature that can be selected is 200°C. Using the +/- buttons you can increase/decrease the temperature in 10°C increments. Your selection of the temperature as you adjust it will be displayed in the LED display.

By default the time is set to 15 minutes. You can easily adjust the time to cook as needed using the +/- buttons. Minimum time that can be selected is 1 minute. Maximum time that can be selected is 60 minutes. Using the +/- buttons you can increase/decrease the time in 1 minute increments. Your selection of the time as you adjust it will be displayed in the LED display.

CAUTION: Appliance surfaces will be hot during and after the cooking process. Please handle with care.

Working Light

Press the button to turn on/off the light inside the appliance any time during the cooking process.

Pre-set Selection



Alternatively, you can select any of the pre-sets to cook your food. Refer to the pre-sets table for the programmed time and temperature for each pre-set option. You can always adjust the time and/or temperature after selecting a pre-set option as needed for your recipe.



Cook, Pause/Stop

After selecting the pre-set option and/or adjusting the temperature and the time as needed, press the Cook/Pause button to start the cooking process after the Beep sound. To pause/stop the cooking process, press the Cook/Pause button again.

Reheat

You can use the appliance to re-heat your food by setting the temperature to 150°C and the timer to 10 minutes.



Rotisserie Fork Rotation

When using the rotisserie function, use the button to turn on/off the fork rotation.



Delay Start

You can set up the appliance to automatically cook your ingredients and have them ready later using the Delay Start feature. Delay Start timer to can be set up from 30mins – 8 hours.

WARNING: It is essential that you do NOT use the delayed start function when using ingredients that may spoil.

PRE-SET PROGRAMS

There are 12 different pre-set cooking programs available within your SOLARA Air Fryer Oven which allow for rapid cooking for a wide range of foods. Below is a table listing 12 pre-sets programs and the default temperature and time settings for each pre-set program.

Pre-set Program	Default Time (minutes)	Default Temperature (°c)
 Pre-Heat	3 minutes	180°C
 French Fries	15 minutes	200°C
 Bread	12 minutes	200°C
 Drumsticks	20 minutes	200°C
 Meat	12 minutes	180°C
 Cake	25 minutes	160°C
 Prawns	8 minutes	180°C
 Fish	10 minutes	180°C
 Whole Chicken	30 minutes	200°C
 Pizza	20 minutes	200
 Vegetables	10 minutes	160°C
 Rotisserie	30 minutes	200°C
 Dehydrate		

***Recommended cooking times in the pre-set options are a guide only. Please adjust the time/temperature as needed for your recipe.**

TIP: Smaller sized ingredients cook faster than bigger sized ingredients.

TIP: Some ingredients require shaking or flipping in the middle of the cooking process for optimal cooking results.

TIP: Add oil/butter to the food ingredients, do not add directly to the basket.

CARE & MAINTENANCE

Clean the appliance after every use. Do not use abrasive kitchen utensils or cleaning materials to clean as this may damage the no stick properties of the basket and the tray.

Disconnect the appliance from the power supply and let it cool down before cleaning.

Wipe the outside of the appliance with a moist cloth to remove any food stains.

Clean the basket and the tray with hot water and dishwashing soap using a non-abrasive sponge.

If the food residue does not clean away easily, soak the attachments/accessories in hot water with some washing soap in it.

TROUBLE SHOOTING

As with any appliance, there may be times when your air fryer oven is not working as expected. Use the below table to easily troubleshoot the issue.

Problem	Possible Cause	Solution
The air fryer oven does not start.	The air fryer is not properly plugged in.	Properly plug in the main plug into an earthed wall socket.
	Power supply is not provided.	Make sure the power supply is correct.
	Cook/Pause button is not pressed.	Press the Cook/Pause button.
The food is not fully cooked.	Too much food is placed in the basket.	Portion the food into smaller batches.
	Selected temperature is too low.	Adjust the temperature.
	Selected time is low.	Adjust the time.
The food is cooked unevenly.	Some foods require to be shaken halfway during the cooking process.	Ensure that the food is properly shaken to evenly cook the food.
There is smoke coming out of the air fryer oven.	There is too much food in the tray which could be touching the heating elements.	Do not overfill the appliance with food. Portion the food into smaller batches.
	Too much oil is used in the food.	Reduce the oil in the food.

